
SERVICE-PROGRAMS

 


PHONOGRAPHS

ES III
electronic

When opening the LID the service Programme will take place.
Pressing R-Button resets to regular programme.
Err display shows failure.

KEY BOARD



SERVICE-PROGRAMMS
— ES III —

Display	Description	Legitimation in:		Remarks
		Serv. Progr. key required	Programmable by key identification	
P 00	Conversion, lowest Price and Credit	x	x	<p>Re-programming requires 5 Digit-inputs: The first 3 Digits for the coins (max. 9.95) The last 2 for the credit (max. 63)</p> <p>1 2 3 </p> <p>Re-programming requires 5 inputs: The first 3 for the coins (max. 9.95) The last 2 for the cash impulses (max. 63) { P 05 - P 08 Programme steps} Identifies coin channels when coinng.</p> <p>first 3 last 2</p>
01	conversion, step 2	x	x	
02	conversion, step 3	x	x	
03	conversion, step 4	x	x	
04	conversion, highest price and credit	x	x	
05	coin channel 1)	x	x	
06	2) value of coins and number of pulses	x	x	
07	3)	x	x	
08	4)	x	x	
09	Dollar bill acceptor	x	x	
P 10	Number of free plays	x	x	A maximum of 254 free plays is possible, no subtraction at 255.
11	Time interval for random play	x	x	Number = minutes
P 20	Number of records to be played		x	The number of records to be playing
21	Synchron. position		x	For the type 120 = set 60. For the types 160 and 240 = set 80
22	Volume, left		x	<p>Will be automatically programmed with volume setting</p> <p>The group credits may be as high as 10 The size of group tunes may be as much as 10 sides of record max. 99 to cancel press and top ten button</p>
23	Volume, right		x	
24	Volume, left - for background only		x	
25	Volume, right - for background only		x	
26	Price per group	x	x	
27	Size of group	x	x	
28	Box code number for recording device	x	x	
29	Service card - code for recording device	x	x	
P 30	Counter of plays, A-side	x		
31	Counter of plays, B-side	x		31 cum. counter P 61
32	Cash impulses, monetary value, change with top ten button	x		32 cum. counter P 62
33	Wall box plays	x		33 cum. counter P 63
34	Free plays counter	x		34 cum. counter P 64
35	Selection counter	x		35 cum. counter P 65
36	Group selection counter	x		36 cum. counter P 66
37	Hit parade selection counter	x		37 cum. counter P 67
38	Counter for background records played	x		38 cum. counter P 68
39	Counter for random records played	x		39 cum. counter P 69
P 40	Pop. counter of groups			Read out by pressing top ten button
41	Pop. counter of sides of records			Read out single group by pressing G-Number and top ten button
42	Pop. counter reading of individual records (A+B), from least frequented record upwards			by ten hit button
43	Pop. counter of individual records(A+B), from best record downwards			
44	Transfer to service card			Display : PE = full; PP = correct; PH = just full
45	Transfer to printer	x	x*	when programming: 1st figure = Baud rate, 2nd figure = printing size * if required
46	Test programme			in test programme tt in credit displays reset by coin insertion or reset button
47	programming of key for remote control	x	x	to programme input key code by remote control (14 variations) write in by top ten button
48	programming of service legitimation	x	x	
49	Legitimation to enter keyed programme			
P 50	Credit clearing	x		to cancel press button 50
51	Pop. counter clearing	x		" " 51
52	Clearing of credit, pop.counter, P 30-39	x		" " 52