


Model 436 A

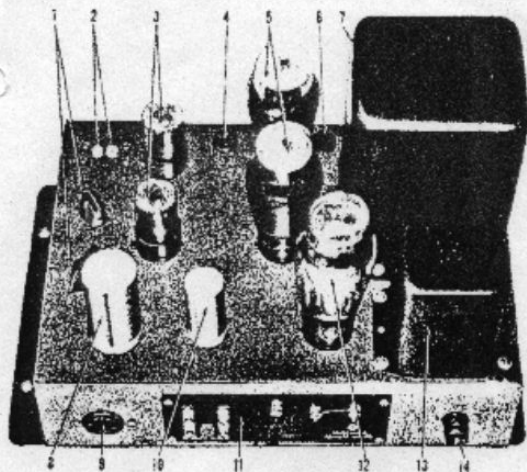

(TOP VIEW)
No. 17360-A Amplifier Assembly
(Less Tubes)

Part No.	Description
1	11578 Pointer Knob
2	16904 Phonograph Connector
3	12546 6SN7 Tube
4	17275 Miniature 5 Prong Socket
5	PH-3191 6L6 Tube
6	17221 Power Transformer
7	16810 Miniature 4 Prong Socket
8	16926 Filter Capacitor
9	PH-3740 5 Prong Socket
10	16924 Input Capacitor
11	12769 Speaker Terminal Strip
12	PH-3190 5U4 Tube
13	17220 Output Transformer
14	PH-3523 3 Amp. Fuse

(BOTTOM VIEW)
No. 17360-A Amplifier Assembly (Less Tubes)

Part No.	Description
1	16925 Filter Resistor
2	16927 200 Ohm Resistor
3	PH-3177 50 Mfd. 50 V. Condenser
4	16228 100,000 Ohm Resistor
5	13034 .1 Mfd. 600 V. Condenser
6	15204 25 Mfd. Capacitor
7	13040 .5 Mfd. 150 V. Condenser
8	16223 10,000 Ohm Resistor
9	16904 Phonograph Connector
10	13320 1 Megohm Resistor
11	15190 .01 Mfd. Capacitor
12	12994 Tone Switch
13	13015 47,000 Ohm Resistor
14	16220 500 M Mfd. Mica Capacitor
15	12994 Tone Switch
16	PH-3512 .005 Mfd. Condenser
17	15194 .002 Mfd. Condenser
18	16222 6,800 Ohm Resistor
19	13034 .1 Mfd. 600 V. Condenser

