

RI-4 Phonograph
RI-5 Phonograph

Field Service Manual and Parts Catalog

PART NO. 2-18479-03 SECOND EDITION 2ND PRINTING

SPECIFICATIONS

GENERAL	RI-4 RI-5
DEPTH	33-1/2 in. (85cm) 33-1/2 in. (85cm) 44-13/16 in. (114cm) 45-15/16 in. (117cm) 220 lbs. (100 Kg.) 220 lbs. (100 Kg.) 120 VAC, 60 Hz., 250 watts 2.6 amps
	220/240 VAC, 50 Hz., 285 watts 1.7 amps
RECORD CHANGER MECHANISM	
RECORD SIZE	
CREDIT AND PRICING SYSTEM	
ACCUMULATOR TYPE CREDIT SYSTEM COINS ACCEPTED	Nickels Dimes Quarters Half-Dollars Dollar Coins
SOUND SYSTEM	
FREQUENCY RESPONSE	
PREAMPLIFIER AVC CONTROL RANGE TREBLE CONTROL	
BASS CONTROL	Compensates for bass loss at low volume levels 12 db per octave

© ROWE INTERNATIONAL, INC. Printed in U.S.A.





MODEL RI-4 PHONOGRAPH MODEL RI-5 PHONOGRAPH

RI-4

RI-5

TRANSFORMER

POWER LEVELS FOR PHONOGRAPH SPEAKERS 3, 6, 12, 35, 50 watts PROVIDES 70 VOLT LINE FOR EXTENSION SPEAKERS

SPEAKE	R SYSTEM						LOW FREQUENCY	HIGH FREQUENCY
SPE	AKER DIAMET	ER					 8 inches	4-1/2 inches
VOI	CE COIL DIAM	ETER					1 inch	0.75 inch
IMP	EDANCE						8 ohms	12 ohms
CRC	SSOVER						2000	Hz.
SYS	TEM FREQUEN	CY R	ESP	ON	SE			50 to 12,000 Hz.
SELECT	ION SYSTEM							

SELECTION SYSTEM

CAPACITY			-		-				-			160 selections

LIGHTING

FRONT DOOR					·	٠	10			til	Fluorescent, 25 watts, 28 inch (T-12 7-00601-07)
CONTROL PANEL.		10	•	•	·		٠	÷			Front lit from front door	
CREDIT WINDOW .		58									Light Emitting Diodes 7-00353-03	

FUSES AND CIRCUIT BREAKERS

MAIN POWER SUPPLY

120 VAC CIRCUIT (T	ran	sf	orn	nei			8258
Primary Only)								. 2 Amp Circuit Breaker, 7-00733-15
								. 10 Amp Circuit Breaker, 7-00734-25
								. 5 Amp Slo-Blo Fuse 7-00721-06
								5 Amp Slo-Blo Fuse 7-00721-06

AMPLIFIER

Stereo - 50W						
120 VAC CIRCUIT						1 Amp Circuit Breaker, 7-00733-11
DC CIRCUIT						 3Amp Fuse, Type AGC (4) 7-00720-08

IMPORTANT

THIS IS A SECTIONALIZED SERVICE MANUAL/PARTS CATALOG. PLEASE TAKE THE TIME TO READ THIS PAGE, AND REVIEW THE TABLE OF CONTENTS THOROUGHLY TO OBTAIN MAXIMUM BENEFITS FROM THIS PUBLICATION.

The first five sections of this Manual are organized to fully realize the serviceability which is engineered into each Phonograph.

These sections are intended primarily for location use to provide familiarization with phonograph components and accessories. Included are detailed system descriptions, procedures for unpacking, set up & installation, programming, routine location servicing and a valuable procedure guide for sequential troubleshooting to isolate a malfunction to one of the plug-in circuit modules.

The troubleshooting isolation procedure detailed in Section 4 is based entirely on visual observation, utilizing the LED indicator lamps on the main power supply and circuit modules. Also in Section 4 are comprehensive Block and Wiring Diagrams.

Section 5 illustrates locations of fuses and circuit breakers and offers a compatibility chart.

Section 6, the PARTS CATALOG, contains a complete listing of procurable replacement parts except for electronic components that are listed directly on the wiring diagrams.

A separate publication, OPERATION SEQUENCE AND SCHEMATICS, elaborates to provide information for the repair of circuit boards and the replacement of electronic components. The information and procedures are intended for an ADVANCED LEVEL OF MAINTENANCE where test equipment is available and service personnel have had electronics training. This publication is available from your distributor, Please order Part No. 3-65355-07.

This equipment has been tested to show compliance with new FCC (47 CFR Part 15) designed to limit interference to radio and TV reception.

warranty

Rowe extends to the original operator of this equipment the following warranty:

All parts are guaranteed to be free of defects in material and workmanship for the specific periods which follow. Rowe agrees to repair without charge during such period any part which proves defective upon examination by Rowe. All costs of shipping an allegedly defective part to or from Rowe's offices shall be borne by the original operator.

Mechanical Moving Parts Electrical and Electronic Parts Lamps and Styli 5 years 2 years 90 days

In the case of parts supplied to Rowe as components, Rowe extends the same warranty period as extended by the original manufacturer.

The above warranty applies provided that all parts of the machine have been serviced properly as directed in the service manual, and provided the alleged defective part, upon examination by Rowe, shall prove to be thus defective.

This warranty will not apply to any machine or any part which has been subjected to any accident, abuse, or misuse.

ROWE INTERNATIONAL, INC. EXTENDS NO WARRANTY, EXPRESSED OR IM-PLIED, TO PURCHASERS OR USERS OF ITS PRODUCTS EXCEPT AS HEREIN SET FORTH, WHETHER BY OPERATION OF LAW OR OTHERWISE.

8.76