

Quick Reference Guide IN 7600






Description of the Machine Components

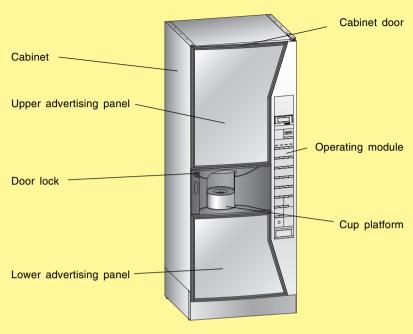

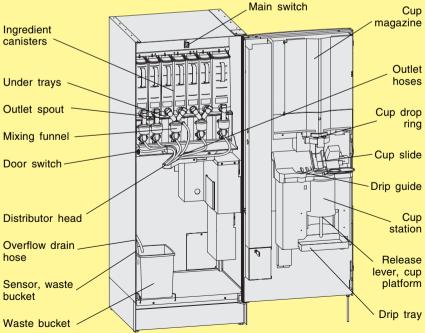

Reference Card Error Types

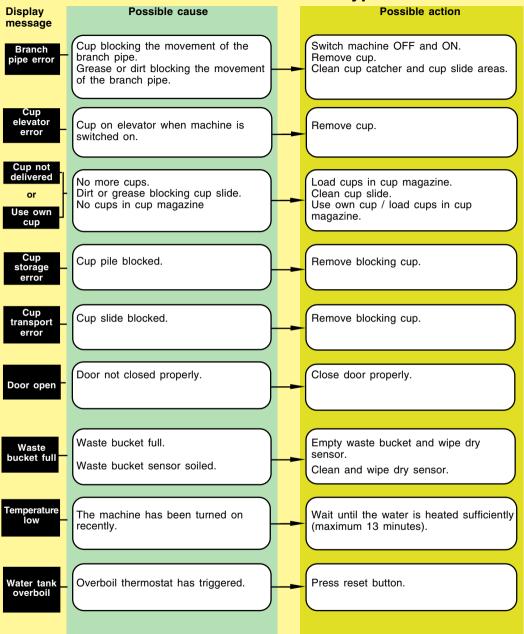

If it was impossible to remedy the fault, or other type of display message is shown, please contact the service.

Reference Card Error Types (continued) Possible cause Possible action Error types Empty bucket and dry sensor. Sensor in waste bucket No display or machine is wet Check fuses/power cord. not No power. operating No Refill canister. Canister empty. inaredient Reinsert canister correctly. Canister not correctly connected. Remove canister, clean auger drive Ingredient sticking to auger drive mechanism. mechanism and reinsert. Leak in mixing system Reinstall and reconnect components. Mixing funnels/hoses not correctly Replace whipper seal. connected. Whipper seal leaking or not installed. Mixing Blockage in mixing funnels or Replace/clean blocked part/s. system dispensing tubes. overflows Water dripping from hot water hoses. Water tank and valves must be Bucket decalcified / replaced. filled with Instruct customers not to pour liquids Liquid has been poured into machine. water into machine. Machine Clean sensor. Foreign body clogging sensor for does not bucket. shut down Reposition sensor correctly in bucket. when bucket is Sensor not in bucket. full Poor Use corrrect ingredients. Wrong ingredients. flavour of drink Replace/clean components and rinse Dispensing system dirty. thoroughly. Inadequate Ingredient residues cloqqina Replace/clean clogged component/s. quantity of dispensing outlet system. drink Install hose of correct length. Kink in outlet hose. Press coin return button. Coin mechanism sticking Coin track dirty, greasy or blocked. Clean coin track, cf. manual of supplier. Coins sticking

If it was impossible to remedy the fault, or other type of display message is shown, please contact the service.

Wait for 10 seconds.

Set correct price.

Switch off free vend.

Machine


dispen<u>ses</u>


free drinks


Cup lock function activated.


Price set to 0.00.

Price set to free vend.

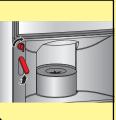

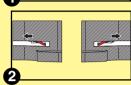

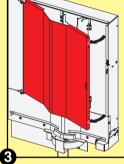

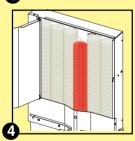

Regular Cleaning *)

Opening and disconnecting

- Turn the door key clockwise in keyhole (1).
- Lift the triggered door handle (1).
 The machine is automatically switched off.

Cup magazine and product canisters

Cup magazine

- Push aside the cup conveyors (2).
- Press down locking latch and open door of cup magazine (3).
- Place cups in the cup magazine, starting with the center column (4).
- · Close door of cup magazine.

Instant ingredient canisters


- Close the outlet spouts (5) of the ingredient canisters by pushing the outlet tubes upwards.
- Take the canisters by the handles and pull them forward *(6)*. The lids are automatically triggered open
- Fill canisters with ingredients.
- Push back canisters.
- Open the outlet spouts (7) of the ingredient canisters by pushing the tubes downwards.

Cleaning parts

Cup platform

• Clean cup platform (8) with a damp cloth.



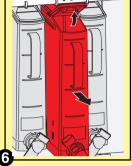






*) All parts to be cleaned regular are designed in a light blue colour. All parts of action are supplied in a green colour.

(see overleaf)

Regular Cleaning (continued)



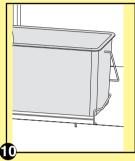

Dispensing area

· Clean drip guide and cup slide with shutter with a damp cloth (9)

Waste bucket

· Lift the waste bucket sensor and take the waste bucket out of machine (10). Empty and clean bucket.

Cleaning inside and outside

- Clean the sensor of the waste bucket with a damp cloth and wipe dry.
- Clean the door and housing inside and outside, and finally the bottom with a clean, damp cloth.

Mounting the cleaned parts


· Remount all parts.

Rinsina

- Have an empty pot (min. 1.5 l) ready to place on the cup stand
- Turn to the display and perform a machine rinse using the preselection buttons (11).
 - Press button '1' to enter [Rinse]-function.
 - Close door and place pot on cup stand (12).
 - Press 'Sel' to start the rinse function. Follow the information on display.
- Repeat the rinse procedure min. once more.
- Press the button 'Esc' until the machine leaves programming mode.
- · Remove and empty the pot.

Last check


- · Clean the machine with a damp cloth on the outside (13).
- · Perform a test dispensing by pressing a selection button, eg. coffee with milk and sugar.

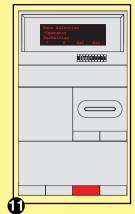







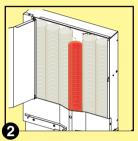



Deep Cleaning *)

Opening and disconnecting

- Turn the door key clockwise in keyhole (1).
- Lift the triggered door handle (1).
 The machine is automatically switched off.

Cup magazine and product canisters

- · Load cups (2) (see regular cleaning).
- Close the outlet spouts (3) of the ingredient canisters by pushing the outlet tubes upwards.
- Fill ingredient canisters with ingredients (4) (see regular cleaning).
- · Leave the outlet spouts closed.


Cleaning parts


It is recommended to have mixing funnel hoods, mixing units with whipper wheels and sealing rings, powder traps distributor head with outlet tubes and hoses as an exchange kit (hygiene kit).

Soak all parts, which will be disassembled, at least for 15 minutes in a bucket with hot water with cleaning agent*.


Instant ingredient mixers

- Remove and clean under trays under ingredient canisters (5).
- Relocate under trays.
- Remove the mixing hoods (6a).
- Remove mixing units: Loosen locking ring by pressing release lever (6b) anti-clockwise, and pull out mixing funnel leaving the hoses back on.
- Pull off the whipper wheels (7a).
- Remove and clean the powder traps (7b).

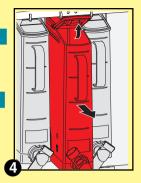

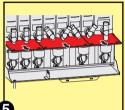



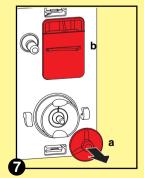



*) All parts to be deep cleaned are designed in a light and dark blue colour. All parts of action are supplied in a green colour.

For **) cleaning and ***)decalcifying: refer to the HACCP guidelines.

(see overleaf)

Deep Cleaning (continued)

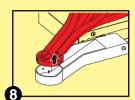

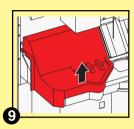



Distributor head

- Unclip the distributor head by pressing upwards from below (8).
- Disassemble the distributor head, hoses and mixing funnels. Soak components in hot water with cleaning agent.

Cleaning the dispensing area

- Remove drip guide (9) by pulling it up and out.
- Unclip cup catcher unit with one hand and remove it with the other using the hole in the guiding plate for cup catcher (10a).
- Unclip and remove cup slide with shutter (10b).

Cup platform and drip tray

- Pull up and take out drip tray (11).
- Press release lever of cup platform with your left hand and pull up the cup platform with your right hand (12).
- Clean the area around the cup station on front side of door.

Waste bucket

· Remove, empty and clean waste bucket (13).

Cleaning inside and outside


- Clean the sensor of the waste bucket with a clean, damp cloth and wipe dry.
- Clean the door and housing inside and outside, and finally the bottom with a clean, damp cloth.
- Flush all parts, which have been soaking, thoroughly with clean and warm water.




Check that no dirt or cleaning agent remains on the parts.

· Dry all parts with a dry cloth.



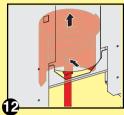

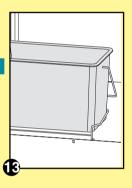


Deep Cleaning (continued)



Mounting the cleaned parts

- · Remount all parts and relocate canisters.
- Open the outlet spouts (14) of the instant ingredient canisters by pushing the tubes downwards.

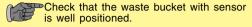

Rinsing and last check

- Close door and place a pot, min. 1.5 I on cup platform.
- Rinse machine twice (see regular cleaning).
- · Clean outside of machine (damp cloth).
- Perform a test dispensing by pressing a selection button eg. coffee with milk and sugar.

HACCP Guidelines





Directives

 For correct operation of the machine, at least the mentioned guidelines must be taken into consideration. The operator is held responsible for the correct operation.

HOTOGRAPHICA

HACCP guidelines


Handling of coffee and ingredients

- Ensure hygienic handling:
- wash hands, preferably with a disinfectant (1)
- use hygienic gloves
- after cleaning, do not touch surfaces of parts that may come into contact with food
- always use a clean cloth when cleaning
- keep the working area tidy.
- · Check the package for integrity and damage (2).
- Store the coffee and ingredients dry, cool and dark.
- Use the packages within the recommended time period (see the "best before"-date on the package).
- Always use packages according to the "first-in-first-out"-principle.
- Thoroughly close an opened package to keep the quality and preventing contamination.
- Coffee and ingredients should be stored separated from cleaning products.
- The ingredient canister should be cleaned occasionally (see operating instructions).
- Do not fill more coffee or ingredients than needed until the next cleaning.

Cleaning the machine

- · Observe the cleaning instructions.
- Clean the machine preferably at the end of the day
- After cleaning, dispense and check a drink (see "Last check").
- · Fill in the cleaning record card.
- When the display indicates an error message (3), observe the reference card.
- Only use the recommended cleaning agents that have been approved for the food industry (slightly disinfecting, preferably liquids, tabs, possibly grains. Avoid powders).

HACCP Guidelines (continued)

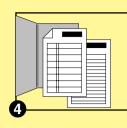

Decalcifying

 Depending on the hardness of water, the metal parts of the filter plate holder must be cleaned after approx. 1000 drinks.

Filing

- After opening, write the date of opening on the package
- File the "best before"-date of the package used to fill the machine.
- File completed cleaning record cards (4).
- File service and maintenance reports.

Training

- Train staff on HACCP guidelines (5).
- Keep the reference cards with the machine.
- Implement the activities in the work schedules.
- For further questions please contact your service representative.



Cleaning Record Card

Declaration: This machine has been cleaned in compliance with the cleaning instructions.

		Signature	
Date	Time	Regular cleaning	Weeky cleaning

Monthly management check				
Date				
Signature				
Comment				

KEEP THIS CARD WITH THE IN 7600 MACHINE (and file when completed)