

TECHNICAL INFORMATION


TYPE NO IN/FB/ES 5100	TYPE Instant / Freshbrew / Espresso Machines	T.I.-NO ... 04/2002				
SERIAL NUMBERS AFFECTED From machine No 523633	ISSUED BY Documentation/ Wittenborg Odense					
SUBJECT New outlet holder	ISSUED FOR (X): <table border="1"> <tr> <td>Action</td> <td></td> </tr> <tr> <td>Information</td> <td>x</td> </tr> </table>		Action		Information	x
Action						
Information	x					

COMPONENTS CONCERNED

Omitted	Article No	Part
	39571500	Outlet tube without tab, long
	39579100	Outlet tube without tab, short
	39581200	Holder for outlet tubes (IN)
	39561000	Holder for outlet tubes (FB)
	39654200	Holder for outlet tubes (ES)
New	Article No	Part
	39700100	Outlet tube with tab, long
	39700200	Outlet tube with tab, short
	39700500	Holder for outlet tubes (IN)
	39700300	Holder for outlet tubes (FB)
	39700400	Holder for outlet tubes (ES)

MODIFICATION

- From the above machine number the outlet tubes (short and long) in the machines have been supplied with a tab. Simultaneously the holder for outlet tubes (FB, IN and ES) have been provided with a notch and a tab.

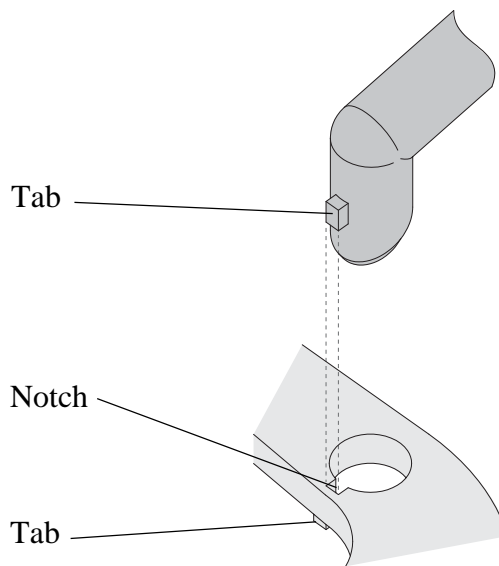

05.06.02 DATE :	Grete Jensen PRODUCED BY :	05.06.02 DATE :	Lars Rehr CHECKED BY :
--------------------	-------------------------------	--------------------	---------------------------

TECHNICAL INFORMATION


TYPE NO IN/FB/ES 5100	TYPE Instant / Freshbrew / Espresso Machines	T.I.-NO ... 04/2002
---------------------------------	--	-------------------------------

REASON

- As the old type of outlet tubes could pop out of the holder for outlet tubes by accident, a kind of locking principle was requested.

The locking principle is that:

- The notch in the holes of the holder for outlet tubes allows the tab of the outlet tubes to pass through the holder (1).
- The tab of the outlet tube locks the outlet tube to the holder, as the tube is turned (2).
- When the outlet tube is to be removed, it is turned until its tab is stopped by the position tap at the lower side of the holder. In this position the outlet tube is released and can be removed (3).

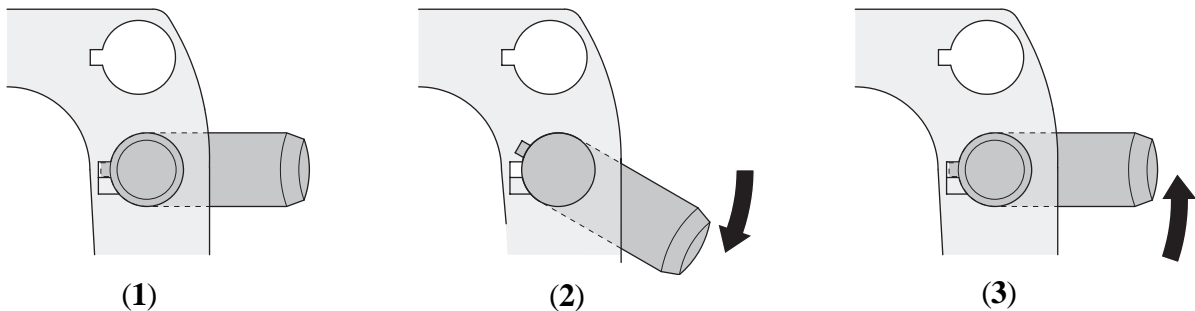

REPLACEABILITY

- The old type of outlet tubes without tab and holder for outlet tubes (without tab) cannot be replaced by the new type of outlet tubes with tab and holder for outlet tubes (with tab) directly.

The old type of outlet tubes and the corresponding holder will only be available as a spare part until the stock is exhausted:

For machines with lower machine no than 523633 and as long as stock is available the following can be ordered:

Outlet tube without tab	Instant	Freshbrew	Espresso
Long outlet tube	39571500	39571500	39571500
Short outlet tube	39579100		
Holder for outlet tube	39581200	39561000	39654200

TECHNICAL INFORMATION

TYPE NO IN/FB/ES 5100	TYPE Instant / Freshbrew / Espresso Machines	T.I.-NO ... 04/2002
---------------------------------	--	-------------------------------

If the new type of outlet tube with tabs is wanted in machines with lower machine no than 523633, the following parts must be ordered simultaneously, or with this machine no and higher the parts can be ordered as follows:

Outlet tube with tab	Instant	Freshbrew	Espresso
Long outlet tube	39700100	39700100	39700100
Short outlet tube	39700200		
Holder for outlet tube	39700500	39700300	39700400

CONTACT PERSON

- Technical
Lars Rehr

Spare parts
Customer Service