

SELECTION TABLE DOSES ASTRO IN-UK.

Written	PB	Approved	PM		
Eprom date	22/09/2005	Sw Code	Rev. 1.0 UK	Country	UK
D.A. Code	F960312-315	Model	IN8M/UKQ		

LAYOUT L02/L4/L06.

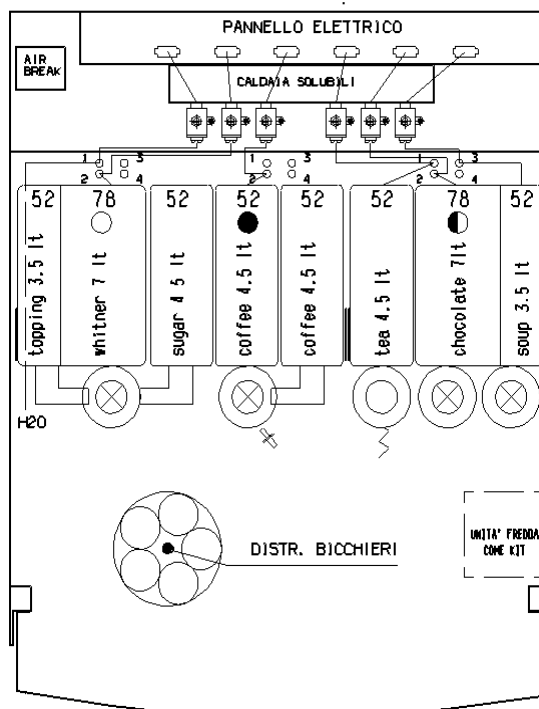


TABELLA PRODOTTI / PRODUCT TABLE.

POSIZ./ POSIT.	PRODOTTO/ PRODUCT	N° DOSAT./ N° DOSING	TARAT. DOS. SETT. DOS. (gram./sec.)	N° ELETTR./ N° ELECTRO.	TAR. EV. SETT. EV (cc/sec.)
1	Topping	1	2,0	2	9
2	Milk / Whitner	2	3,7	2	9
3	Sugar	3	2,2	2	9
4	Coffee Instant Dec	4	0,6	3	10
5	Coffee Instant	5	0,6	3	10
6	Tea	6	0,4	4	15
7	Chocolate	7	3,4	5	9
8	Soup	8	2,2	6	15
/	Hot Water	/	/	1	16
/	Carbonated Water	/	/	7	17
/	Still Water	/	/	8	16

SELECTION TABLE DOSES ASTRO IN-UK.

Written	PB	Approved	PM	
Eprom date	22/09/2005	Sw Code	Rev. 1.0 UK	Country UK
D.A. Code	F960312-315	Model	IN8M/UKQ	

DISPOSIZIONE TASTIERA / KEYBOARD SELECTION L02.

Strength -	⊙	Strength +	⊙
------------	---	------------	---

SELEZIONI/ SELECTION	ZUCCH. SUGAR N.	EX. ZUCCH. EX. SUGAR N.	NO ZUCCH. NO SUGAR N.
Coffee Instant Black	17	18	19
Coffee Instant White	21	22	23
Coffee Instant Ex. White	24	25	26
Chocolate	--	--	27
Soup	--	--	28
Hot Water	--	--	29
Coffee Instant Black Decaffeinated	37	38	39
Coffee Instant White Decaffeinated	41	42	43
Coffee Inst. Ex. White Decaffeinated	44	45	46
Tea Instant White	51	52	53
Tea Instant Extra White	54	55	56
Tea Instant Black	57	58	59
Cappuccino Instant	61	--	62
Espresso Instant	63	--	64
EspressoChoc Instant	65	--	66
ChocoMilk	--	--	67
Instant Cappuccino Decaffeinated	75	--	76
Instant EspressoChoc Decaffeinated	77	--	78
	LISCIA STILL		GASATA/ CARBONATED
Chilled Water	81		84
Orange (Syrop 1)	82		85
Lemon (Syrop 2)	83		86

SELECTION TABLE DOSES ASTRO IN-UK.

Written	PB	Approved	PM	
Eprom date	22/09/2005	Sw Code	Rev. 1.0 UK	Country UK
D.A. Code	F960312-315	Model	IN8M/UKQ	

PRESELEZIONI / PRESELECTIONS L02.

PRESELEZIONE PRESELECTION (N.)	VARIAZ. DOSE DOSE VARIAT.	DESCRIZIONE DESCRIPTION
Strength -	-10 %	Riduce la polvere di Caffè/Tè (3 step)
		Reduces the powder of Coffee/Tea (3 step).
Strength +	+10 %	Aumenta la polvere di Caffè/Tè (3 step)
		Increase the powder of Coffee/Tea (3 step).
Extra Sugar	+ 66%	Aumenta la polvere di zucchero del 66%
		Increase the dose of sugar to 66%
No Sugar	- 100%	Rimuove la dose di zucchero della selezione
		Reset the dose of sugar of the selection

SELEZIONI / SELECTION L02.

SELEZIONE SELECTION (N.)	DOSI ACQUA WATER DOSES	ZUCCH. SUGAR (to cup)	DOSI POLVERI POWDER DOSES			
Coffee Black (17 – 18 – 19)	Coffee Instant 90 cc		Coffee 1.3 gr.			
	Sugar 80 cc (tot. 170 cc)		Sugar 6.0 gr.			
Coffee White (21 – 22 – 23)	Coffee Instant 40 cc		Coffee 1.3 gr.			
	Milk 60 cc		Milk 3.0 gr.	Sugar 6.0 gr.		
	Hot Water 60 cc (tot. 160 cc)					
Coffee Extra White (24 – 25 – 26)	Coffee Instant 40 cc		Coffee 1.3 gr.			
	Milk 60 cc		Milk 4.0 gr.	Sugar 6.0 gr.		
	Hot Water 60 cc (tot. 160 cc)					
Chocolate (27)	Chocolate 80 cc		Chocolate 20.0 gr.			
	Hot Water 70 cc (tot. 150 cc)					
Soup	Soup		Soup			

SELECTION TABLE DOSES ASTRO IN-UK.

Written	PB	Approved	PM	
Eprom date	22/09/2005	Sw Code	Rev. 1.0 UK	Country UK
D.A. Code	F960312-315	Model	IN8M/UKQ	

SELEZIONE SELECTION (N.)	DOSI ACQUA WATER DOSES	ZUCCH. SUGAR (to cup)	DOSI POLVERI POWDER DOSES			
(28)	160 cc		8,0 gr.			
Hot Water (29)	Hot Water 170 cc					
Coffee Black Dec. (37 – 38 – 39)	Coffee Instant Dec. 90 cc		Coffee 1.3 gr.			
	Sugar 80 cc (tot. 170 cc)		Sugar 6.0 gr.			
Coffee White Dec (41 – 42 – 43)	Coffee Instant Dec. 40 cc		Coffee 1.3 gr.			
	Milk 60 cc		Milk 3.0 gr.	Sugar 6.0 gr.		
	Hot Water 60 cc (tot. 160 cc)					
Dec. Extra White (44 – 45 – 46)	Coffee Instant Dec. 40 cc		Coffee 1.3 gr.			
	Milk 60 cc		Milk 4.0 gr.	Sugar 6.0 gr.		
	Hot Water 60 cc (tot. 160 cc)					
Tea Instant White (51 – 52 – 53)	Tea 60 cc		Tea 0.4 gr.			
	Milk 60 cc		Milk 1.8 gr.	Sugar 6.0 gr.		
	Hot Water 50 cc (tot. 170 cc)					
Tea Inst.Ex.White (54 – 55 – 56)	Tea 60 cc		Tea 0.4 gr.			
	Milk 60 cc		Milk 2.4 gr.	Sugar 6.0 gr.		
	Hot Water 50 cc (tot. 170 cc)					
Tea Instant Black (57 – 58 – 59)	Tea 60 cc		Tea 0.4 gr.			
	Sugar 60 cc		Sugar 6.0 gr.			
	Hot Water 50 cc (tot. 170 cc)					

SELECTION TABLE DOSES ASTRO IN-UK.

Written	PB	Approved	PM	
Eprom date	22/09/2005	Sw Code	Rev. 1.0 UK	Country UK
D.A. Code	F960312-315	Model	IN8M/UKQ	

SELEZIONE SELECTION (N.)	DOSI ACQUA WATER DOSES	ZUCCH. SUGAR (to cup)	DOSI POLVERI POWDER DOSES			
Inst. Cappuccino (61 – 62)	Coffee Instant 40 cc		Coffee 1,6 gr.			
	Topping 60 cc		Topping 6.0 gr.	Sugar 6.0 gr.		
	Chocolate 40 cc (tot. 140 cc)		Chocolate 9,6 gr.			
Espresso (63 – 64)	Coffee Instant 35 cc		Coffee 1,4 gr.			
	Sugar 35 cc (tot. 70 cc)		Sugar 6.0 gr.			
Ins.EspressoChoc (65 – 66)	Milk 50 cc		Milk 1,8 gr.	Sugar 6.0 gr.		
	Coffee Instant 40 cc		Coffee 1.3 gr.			
	Chocolate 60 cc (tot. 150 cc)		Chocolate 13 gr.			
Chocomilk (67)	Chocolate 80 cc		Chocolate 16,0 gr.			
	Milk 70 cc (tot. 150 cc)		Milk 1,4 gr.			
Dec. Cappuccino (75 – 76)	Coffee Instant Dec. 40 cc		Coffee 1,6 gr.			
	Topping 60 cc		Topping 6.0 gr.	Sugar 6.0 gr.		
	Chocolate 40 cc (tot. 140 cc)		Chocolate 9,6 gr.			
Dec. Espr. Choc (77 – 78)	Milk 50 cc		Milk 1,8 gr.	Sugar 6.0 gr.		
	Coffee Instant Dec. 40 cc		Coffee 1.3 gr.			
	Chocolate 60 cc (tot. 150 cc)		Chocolate 13 gr.			
Chilled Water (81)	Still 170 cc					
Chilled Water (84)	Carbonated 150 cc					
	Still 20 cc (tot. 170cc)					

SELECTION TABLE DOSES ASTRO IN-UK.

Written	PB	Approved	PM	
Eprom date	22/09/2005	Sw Code	Rev. 1.0 UK	Country UK
D.A. Code	F960312-315	Model	IN8M/UKQ	

SELEZIONE SELECTION (N.)	DOSI ACQUA WATER DOSES	ZUCCH. SUGAR (to cup)	DOSI POLVERI POWDER DOSES			
Orange (82)	Still 150 cc		Syrup 1 24 ds			
Orange (85)	Still 35 cc		Syrup 1 0 ds			
	Carbonated 95 cc		Syrup 1 24 ds			
	Still 20 cc (tot. 150cc)					
Lemon (83)	Still 150 cc		Syrup 2 24 ds			
Lemon (86)	Still 35 cc		Syrup 2 0 ds			
	Carbonated 95 cc		Syrup 2 24 ds			
	Still 20 cc (tot. 150cc)					

SELECTION TABLE DOSES ASTRO IN-UK.

Written	PB	Approved	PM	
Eprom date	22/09/2005	Sw Code	Rev. 1.0 UK	Country UK
D.A. Code	F960312-315	Model	IN8M/UKQ	

LAYOUT L04.

N.B. Il layout 4 viene ottenuto dal 2 con la sola differenza di utilizzo di selezioni a 9oz invece che 7oz.

ATT. The layout 4 is obtained from layout 2 with the only modification to use 9oz selections instead of 7oz selections.

TABELLA PRODOTTI / PRODUCT TABLE.

POSIZ./ POSIT.	PRODOTTO/ PRODUCT	N° DOSAT./ N° DOSING	TARAT. DOS. SETT. DOS. (gram./sec.)	N° ELETTR./ N° ELECTRO.	TAR. EV. SETT. EV (cc/sec.)
1	Topping	1	2.0	2	9
2	Milk / Whitener	2	3.7	2	9
3	Sugar	3	2.2	2	9
4	Coffee Instant Dec	4	0,6	3	10
5	Coffee Instant	5	0,6	3	10
6	Tea	6	0.4	4	15
7	Chocolate	7	3.4	5	9
8	Soup	8	2.2	6	15
/	Hot Water	/	/	1	16
/	Carbonated Water	/	/	7	17
/	Still Water	/	/	8	16

DISPOSIZIONE TASTIERA / KEYBOARD SELECTION L04.

Strength -	⊙	Strength +	⊙
------------	---	------------	---

SELECTION TABLE DOSES ASTRO IN-UK.

Written PB	Approved PM	
Eprom date 22/09/2005	Sw Code Rev. 1.0 UK	Country UK
D.A. Code F960312-315	Model IN8M/UKQ	

SELEZIONI/ SELECTION	ZUCCH. SUGAR N.	EX. ZUCCH. EX. SUGAR N.	NO ZUCCH. NO SUGAR N.
Coffee Instant Black	17	18	19
Coffee Instant White	21	22	23
Coffee Instant Ex. White	24	25	26
Chocolate	--	--	27
Soup	--	--	28
Hot Water	--	--	29
Coffee Instant Black Decaffeinated	37	38	39
Coffee Instant White Decaffeinated	41	42	43
Coffee Inst. Ex. White Decaffeinated	44	45	46
Tea Instant White	51	52	53
Tea Instant Extra White	54	55	56
Tea Instant Black	57	58	59
Cappuccino Instant	61	--	62
Espresso Instant	63	--	64
EspressoChoc Instant	65	--	66
ChocoMilk	--	--	67
Instant Cappuccino Decaffeinated	75	--	76
Instant EspressoChoc Decaffeinated	77	--	78
	LISCIA STILL		GASATA/ CARBONATED
Chilled Water	81		84
Orange (Syrup 1)	82		85
Lemon (Syrup 2)	83		86

PRESELEZIONI / PRESELECTIONS L04.

PRESELEZIONE PRESELECTION (N.)	VARIAZ. DOSE DOSE VARIAT.	DESCRIZIONE DESCRIPTION
Strength -	-10 %	Riduce la polvere di Caffè/Tè (3 step)
		Reduces the powder of Coffee/Tea (3 step).
Strength +	+10 %	Aumenta la polvere di Caffè/Tè (3 step)
		Increase the powder of Coffee/Tea (3 step).
Extra Sugar	+ 66%	Aumenta la polvere di zucchero del 66%
		Increase the dose of sugar to 66%
No Sugar	- 100%	Rimuove la dose di zucchero della selezione
		Reset the dose of sugar of the selection

SELECTION TABLE DOSES ASTRO IN-UK.

Written	PB	Approved	PM	
Eprom date	22/09/2005	Sw Code	Rev. 1.0 UK	Country UK
D.A. Code	F960312-315	Model	IN8M/UKQ	

SELEZIONI / SELECTION L04.

SELEZIONE SELECTION (N.)	DOSI ACQUA WATER DOSES	ZUCCH. SUGAR (to cup)	DOSI POLVERI POWDER DOSES			
Coffee Black (17 – 18 – 19)	Coffee Instant 95 cc		Coffee 1.3 gr.			
	Sugar 95 cc (tot. 190 cc)		Sugar 6.0 gr.			
Coffee White (21 – 22 – 23)	Coffee Instant 50 cc		Coffee 1,4 gr.			
	Milk 70 cc		Milk 3.0 gr.	Sugar 6.0 gr.		
	Hot Water 60 cc (tot. 180 cc)					
Coffee Extra White (24 – 25 – 26)	Coffee Instant 50 cc		Coffee 1,4 gr.			
	Milk 70 cc		Milk 4.0 gr.	Sugar 6.0 gr.		
	Hot Water 60 cc (tot. 180 cc)					
Chocolate (27)	Chocolate 90 cc		Chocolate 20.0 gr.			
	Hot Water 70 cc (tot. 160 cc)					
Soup (28)	Soup 190 cc		Soup 8,0 gr.			
Hot Water (29)	Hot Water 200 cc					
Coffee Black Dec. (37 – 38 – 39)	Coffee Instant Dec. 95 cc		Coffee 1,4 gr.			
	Sugar 95 cc (tot. 190 cc)		Sugar 6.0 gr.			
Coffee White Dec (41 – 42 – 43)	Coffee Instant Dec. 50 cc		Coffee 1,4 gr.			
	Milk 70 cc		Milk 3.0 gr.	Sugar 6.0 gr.		
	Hot Water 60 cc (tot. 180 cc)					

SELECTION TABLE DOSES ASTRO IN-UK.

Written	PB	Approved	PM	
Eprom date	22/09/2005	Sw Code	Rev. 1.0 UK	Country UK
D.A. Code	F960312-315	Model	IN8M/UKQ	

SELEZIONE SELECTION (N.)	DOSI ACQUA WATER DOSES	ZUCCH. SUGAR (to cup)	DOSI POLVERI POWDER DOSES			
Dec. Extra White (44 – 45 – 46)	Coffee Instant Dec. 50 cc		Coffee 1,4 gr.			
	Milk 70 cc		Milk 4.0 gr.	Sugar 6.0 gr.		
	Hot Water 60 cc (tot. 180 cc)					
Tea Instant White (51 – 52 – 53)	Tea 70 cc		Tea 0.5 gr.			
	Milk 70 cc		Milk 2.0 gr.	Sugar 6.0 gr.		
	Hot Water 60 cc (tot. 200 cc)					
Tea Inst. Ex. White (54 – 55 – 56)	Tea 70 cc		Tea 0.5 gr.			
	Milk 70 cc		Milk 3.0 gr.	Sugar 6.0 gr.		
	Hot Water 60 cc (tot. 200 cc)					
Tea Instant Black (57 – 58 – 59)	Tea 70 cc		Tea 0.5 gr.			
	Sugar 70 cc		Sugar 6.0 gr.			
	Hot Water 60 cc (tot. 200 cc)					
Inst. Cappuccino (61 – 62)	Coffee Instant 40 cc		Coffee 1,6 gr.			
	Topping 70 cc		Topping 6.0 gr.	Sugar 6.0 gr.		
	Chocolate 50 cc (tot. 160 cc)		Chocolate 9,6 gr.			
Espresso (63 – 64)	Coffee Instant 35 cc		Coffee 1,4 gr.			
	Sugar 35 cc (tot. 70 cc)		Sugar 6.0 gr.			

SELECTION TABLE DOSES ASTRO IN-UK.

Written	PB	Approved	PM		
Eprom date	22/09/2005	Sw Code	Rev. 1.0 UK	Country	UK
D.A. Code	F960312-315	Model	IN8M/UKQ		

SELEZIONE SELECTION (N.)	DOSI ACQUA WATER DOSES	ZUCCH. SUGAR (to cup)	DOSI POLVERI POWDER DOSES		
Ins. EspressoChoc (65 – 66)	Milk 50 cc		Milk 1,8 gr.	Sugar 6.0 gr.	
	Coffee Instant 40 cc		Coffee 1,4 gr.		
	Chocolate 70 cc (tot. 160 cc)		Chocolate 13 gr.		
Chocomilk (67)	Chocolate 90 cc		Chocolate 16,0 gr.		
	Milk 70 cc (tot. 160 cc)		Milk 1,4 gr.		
Dec. Cappuccino (75 – 76)	Coffee Instant Dec. 40 cc		Coffee 1,6 gr.		
	Topping 70 cc		Topping 6.0 gr.	Sugar 6.0 gr.	
	Chocolate 50 cc (tot. 160 cc)		Chocolate 9,6 gr.		
Dec. Espr. Choc (77 – 78)	Milk 50 cc		Milk 1,8 gr.	Sugar 6.0 gr.	
	Coffee Instant Dec. 40 cc		Coffee 1,4 gr.		
	Chocolate 70 cc (tot. 160 cc)		Chocolate 13 gr.		
Chilled Water (81)	Still 200 cc				
Chilled Water (84)	Carbonated 170 cc				
	Still 30 cc (tot. 200cc)				
Orange (82)	Still 170 cc		Syrup 1 24 ds		
Orange (85)	Still 35 cc		Syrup 1 0 ds		
	Carbonated 105 cc		Syrup 1 24 ds		
	Still 30 cc (tot. 170cc)				
Lemon (83)	Still 170 cc		Syrup 2 24 ds		
Lemon	Still		Syrup 2		

SELECTION TABLE DOSES ASTRO IN-UK.

Written	PB	Approved	PM	
Eprom date	22/09/2005	Sw Code	Rev. 1.0 UK	Country UK
D.A. Code	F960312-315	Model	IN8M/UKQ	

SELEZIONE SELECTION (N.)	DOSI ACQUA WATER DOSES	ZUCCH. SUGAR (to cup)	DOSI POLVERI POWDER DOSES			
(86)	35 cc		0 ds			
	Carbonated 105 cc		Syrup 2 24 ds			
	Still 30 cc (tot. 170cc)					

SELECTION TABLE DOSES ASTRO IN-UK.

Written	PB	Approved	PM		
Eprom date	22/09/2005	Sw Code	Rev. 1.0 UK	Country	UK
D.A. Code	F960312-315	Model	IN8M/UKQ		

LAYOUT L06.

N.B. Il layout 6 viene ottenuto dal 2 con la sola differenza di collegare il tubo dal dosatore dello zucchero al mixer del caffè instant invece che al mixer del latte.

ATT. The layout 6 comes gotten from the layout 2 with the only modification to connect the sugar doser pipe to the Coffe Instant mixer instead of Milk mixer.

TABELLA PRODOTTI / PRODUCT TABLE.

POSIZ./ POSIT.	PRODOTTO/ PRODUCT	N° DOSAT./ N° DOSING	TARAT. DOS. SETT. DOS. (gram./sec.)	N° ELETTR./ N° ELECTRO.	TAR. EV. SETT. EV (cc/sec.)
1	Topping	1	1,5	2	9
2	Milk / Whitner	2	1,5	2	9
3	Sugar	3	2,3	3	10
4	Coffee Instant Dec	4	0,6	3	10
5	Coffee Instant	5	0,6	3	10
6	Tea	6	2,5	4	15
7	Chocolate	7	3,0	5	9
8	Soup	8	2,5	6	15
/	Hot Water	/	/	1	16
/	Carbonated Water	/	/	7	17
/	Still Water	/	/	8	16

DISPOSIZIONE TASTIERA / KEYBOARD SELECTION L06.

Strength -	⊙	Strength +	⊙
------------	---	------------	---

SELECTION TABLE DOSES ASTRO IN-UK.

Written PB	Approved PM	
Eprom date 22/09/2005	Sw Code Rev. 1.0 UK	Country UK
D.A. Code F960312-315	Model IN8M/UKQ	

SELEZIONI/ SELECTION	ZUCCH. SUGAR N.	EX. ZUCCH. EX. SUGAR N.	NO ZUCCH. NO SUGAR N.
Coffee Instant Black	17	18	19
Coffee Instant White	21	22	23
Coffee Instant Ex. White	24	25	26
Chocolate	--	--	27
Soup	--	--	28
Hot Water	--	--	29
Coffee Instant Black Decaffeinated	37	38	39
Coffee Instant White Decaffeinated	41	42	43
Coffee Inst. Ex. White Decaffeinated	44	45	46
Tea Instant White	51	52	53
Tea Instant Extra White	54	55	56
Tea Instant Black	57	58	59
Cappuccino Instant	61	--	62
Espresso Instant	63	--	64
EspressoChoc Instant	65	--	66
ChocoMilk	--	--	67
Instant Cappuccino Decaffeinated	75	--	76
Instant EspressoChoc Decaffeinated	77	--	78
	LISCIA STILL		GASATA/ CARBONATED
Chilled Water	81		84
Orange (Syrop 1)	82		85
Lemon (Syrop 2)	83		86

PRESELEZIONI / PRESELECTIONS L06.

PRESELEZIONE PRESELECTION (N.)	VARIAZ. DOSE DOSE VARIAT.	DESCRIZIONE DESCRIPTION
Strength -	-10 %	Riduce la polvere di Caffè/Tè (3 step)
		Reduces the powder of Coffee/Tea (3 step).
Strength +	+10 %	Aumenta la polvere di Caffè/Tè (3 step)
		Increase the powder of Coffee/Tea (3 step).
Extra Sugar	+ 66%	Aumenta la polvere di zucchero del 66%
		Increase the dose of sugar to 66%
No Sugar	- 100%	Rimuove la dose di zucchero della selezione
		Reset the dose of sugar of the selection

SELEZIONI / SELECTION L06.

SELECTION TABLE DOSES ASTRO IN-UK.

Written	PB	Approved	PM	
Eprom date	22/09/2005	Sw Code	Rev. 1.0 UK	Country UK
D.A. Code	F960312-315	Model	IN8M/UKQ	

SELEZIONE SELECTION (N.)	DOSI ACQUA WATER DOSES	ZUCCH. SUGAR (to cup)	DOSI POLVERI POWDER DOSES			
Coffee Black (17 – 18 – 19)	Coffee Instant 40 cc		Coffee 1,4 gr.	Sugar 5,3 gr.		
	Hot Water 50 cc (tot. 90 cc)					
Coffee White (21 – 22 – 23)	Coffee Instant 40 cc		Coffee 1,4 gr.	Sugar 5,3 gr.		
	Milk 60 cc		Milk 1,8 gr.			
	Hot Water 50 cc (tot. 150 cc)					
Coffee Extra White (24 – 25 – 26)	Coffee Instant 40 cc		Coffee 1,4 gr.	Sugar 5,3 gr.		
	Milk 60 cc		Milk 3,0 gr.			
	Hot Water 50 cc (tot. 150 cc)					
Chocolate (27)	Chocolate 80 cc		Chocolate 19,0 gr.			
	Hot Water 60 cc (tot. 140 cc)					
Soup (28)	Soup 150 cc		Soup 8,0 gr.			
Hot Water (29)	Hot Water 150 cc					
Coffee Black Dec. (37 – 38 – 39)	Coffee Instant Dec. 40 cc		Coffee 1,4 gr.	Sugar 5,3 gr.		
	Hot Water 50 cc (tot. 90 cc)					
Coffee White Dec (41 – 42 – 43)	Coffee Instant Dec. 40 cc		Coffee 1,4 gr.	Sugar 5,3 gr.		
	Milk 60 cc		Milk 1,8 gr.			
	Hot Water 50 cc (tot. 150 cc)					

SELECTION TABLE DOSES ASTRO IN-UK.

Written	PB	Approved	PM	
Eprom date	22/09/2005	Sw Code	Rev. 1.0 UK	Country UK
D.A. Code	F960312-315	Model	IN8M/UKQ	

SELEZIONE SELECTION (N.)	DOSI ACQUA WATER DOSES	ZUCCH. SUGAR (to cup)	DOSI POLVERI POWDER DOSES			
Dec. Extra White (44 – 45 – 46)	Coffee Instant Dec. 40 cc		Coffee 1,4 gr.	Sugar 5,3 gr.		
	Milk 60 cc		Milk 3,0 gr.			
	Hot Water 50 cc (tot. 150 cc)					
Tea Instant White (51 – 52 – 53)	Tea 50 cc		Tea 0,9 gr.			
	Milk 60 cc		Milk 0,7 gr.			
	Sugar 50 cc (tot. 160 cc)		Sugar 5,3 gr.			
Tea Inst.Ex. White (54 – 55 – 56)	Tea 50 cc		Tea 0,9 gr.			
	Milk 60 cc		Milk 1,1 gr.			
	Sugar 50 cc (tot. 160 cc)		Sugar 5,3 gr.			
Tea Instant Black (57 – 58 – 59)	Tea 50 cc		Tea 0,9 gr.			
	Sugar 60 cc		Sugar 5,3 gr.			
	Hot Water 50 cc (tot. 160 cc)					
Inst. Cappuccino (61 – 62)	Coffee Instant 40 cc		Coffee 1,6 gr.	Sugar 5,3 gr.		
	Topping 60 cc		Topping 8,0 gr.			
	Chocolate 40 cc (tot. 140 cc)		Chocolate 9,6 gr.			
Espresso (63 – 64)	Coffee Instant 65 cc		Coffee 1,4 gr.	Sugar 5,3 gr.		
Ins.EspressoChoc (65 – 66)	Milk 35 cc		Milk 1,8 gr.			
	Coffee Instant 40 cc		Coffee 1,4 gr.	Sugar 5,3 gr.		
	Chocolate 50 cc (tot. 125 cc)		Chocolate 13 gr.			

SELECTION TABLE DOSES ASTRO IN-UK.

Written	PB	Approved	PM	
Eprom date	22/09/2005	Sw Code	Rev. 1.0 UK	Country UK
D.A. Code	F960312-315	Model	IN8M/UKQ	

SELEZIONE SELECTION (N.)	DOSI ACQUA WATER DOSES	ZUCCH. SUGAR (to cup)	DOSI POLVERI POWDER DOSES		
Chocomilk (67)	Chocolate 80 cc		Chocolate 16,0 gr.		
	Milk 60 cc (tot. 140 cc)		Milk 1,4 gr.		
Dec. Cappuccino (75 – 76)	Coffee Instant Dec. 40 cc		Coffee 1,6 gr.	Sugar 5,3 gr.	
	Topping 60 cc		Topping 8,0 gr.		
	Chocolate 40 cc (tot. 140 cc)		Chocolate 9,6 gr.		
Dec. Espr. Choc (77 – 78)	Milk 35 cc		Milk 1,8 gr.		
	Coffee Instant Dec. 40 cc		Coffee 1,4 gr.	Sugar 5,3 gr.	
	Chocolate 50 cc (tot. 125 cc)		Chocolate 13 gr.		
Chilled Water (81)	Still 160 cc				
Chilled Water (84)	Carbonated 140 cc				
	Still 20 cc (tot. 160)				
Orange (82)	Still 150 cc		Syrop 1 32 ds		
Orange (85)	Still 35 cc		Syrop 1 0 ds		
	Carbonated 95 cc		Syrop 1 32 ds		
	Still 20 cc (tot. 150)				
Lemon (83)	Still 150 cc		Syrop 2 32 ds		
Lemon (86)	Still 35 cc		Syrop 2 0 ds		
	Carbonated 95 cc		Syrop 2 32 ds		
	Still 20 cc (tot. 150)				

SELECTION TABLE DOSES ASTRO IN-UK.

Written	PB	Approved	PM	
Eprom date	22/09/2005	Sw Code	Rev. 1.0 UK	Country UK
D.A. Code	F960312-315	Model	IN8M/UKQ	

INFORMAZIONI GENERALI.

TABELLA PESI VALIDATORE:

Linea	A	B	C	D	E	F
Peso	1	2	10	20	50	5

PREZZO SELEZIONI: Tutte le selezioni a 10.00.

NPRESSO SELEZIONI: Tutte le selezioni puntano al prezzo 1.

POSIZIONE PUNTO DECIMALE: 2.

TEMPERATURA CALDAIA EXP: ---- °C.

TEMPERATURA CALDAIA SOLUBILI: 86.0 °C.

RITARDI ACQUE / POLVERI: Ritardo polvere rispetto all'acqua 0.6 sec.

TIPO DI TASTIERA: Tastiera numerica.

LINGUE: Italiano, Francaise, Espanol, **English**, Deutsch, Catalan, Nederlands, Portugues, Czech, Polski, Slovensko, Русский.

Per l'impostazione del sistema di pagamento si utilizza il menu 2.1.2.1. Nel caso in cui il distributore non abbia sistema di pagamento bisogna impostare OFF.

Gestione Astro-Sfera in batteria master-slave. (La Rev. Astro 1.0 UK può lavorare solo con la Rev. Sfera 1.8 o superiori).

Gestione Astro-Snakky-Max in batteria master-slave. (La Rev. Astro 1.0 UK può lavorare solo con la Rev. Snakky-Max 1.3 o superiori).

Sistemi di pagamento: validatori, executive, bdv, mdb.

GENERAL INFORMATION.

PAYMENT SYSTEMS DETAILS:

Line	A	B	C	D	E	F
Weight	1	2	10	20	50	5

SELECTION PRICE: All the selections to 10.00.

SELECTION NPRICE: All selections are set price line 1.

DECIMAL POINT POSITION: 2.

TEMPERATURE BOILER EXP: ---- °C.

TEMPERATURE BOILER INSTANT: 86.0 °C.

WATER/POWDER DELAYS: Powder delays to water 0.6 sec.

SELECTION TABLE DOSES ASTRO IN-UK.

Written	PB	Approved	PM	
Eprom date	22/09/2005	Sw Code	Rev. 1.0 UK	Country UK
D.A. Code	F960312-315	Model	IN8M/UKQ	

TYPE OF KEYBOARD: Numerical keyboard.

LANGUAGE: Italiano, Francaise, Espanol, **English**, Deutsch, Catalan, Nederlands, Portugues, Czech, Polski, Slovensko, Русский.

For the payment system setting it is used the menu 2.1.2.1. In case of situation without payment system it is needed to set this parameter to OFF.

The Sw. Astro Rev. 1.0 UK can only work with Sfera/Rondò Rev. 1.8 or upper).

The Sw. Astro Rev. 1.0 UK can only work with Snakky-Max Rev. 1.3 or upper).

Payment system: validatori, executive, bdv, mdb.

MODIFICHE.

Implementazione gestioni sportelli e taniche per autoalimentazione.

Gestione funzionamento ventola sulla mensola del FB montata in posizione centrale.

Aggiunta dei menù d'impostazione dell'ID per l'unità fredda (Tecn. 5.3) e del tempo di movimentazione ugelli per le bevande fredde e selezione acqua calda (Tecn. 5.4).

Modifiche per l'Operator friendly (pulsanti aggiunti, gestione lavaggi ed acqua calda).

Modifica ciclo di erogazione delle bevande carbonare con una coda di acqua fredda.

Implementazione MDB, EVADTS, GSM e SETUP AUTOMATICO (Fill>6.x / Fill>7.x / Tecn>5.6 / Tecn>6.x).

Tempi di sgocciolamento programmabili.

Menu mdb per impostazione banconote accettate sotto il livello.

Modifica alla struttura del database (l'upgrade necessita l'inizializzazione del d.a.).

Modifica del valore minimo del tempo di uscita ugelli per freddo e caldo (80).

Modifica delle attuazioni generate dal pulsante utility "SPOUTS" (uscita e rientro degli ugelli senza arresto)

Modifica della gestione delle statistiche (azzeramento) via GSM.

Programmazione tramite l'utilizzo di UP-KEY.

Modifica della gestione dei lavaggi e degli schizzi su distributori con acque fredde.

Eliminazione del controllo della presenza della caraffa in modalità Jug Facilities.

Gestione VENDITA LIBERA con solo sistemi CASHLESS e protocollo MDB.

Gestione up-key per leggere e scrivere setup e per leggere statistiche.

Gestione gruppo caffè Z3000.

Inserita la gestione della funzione di premacinatura.

SW CPU / SCHEDA ATTUAZIONI REV. 1.0 UK:

Modificate le dosi dei layout con selezioni da 7oz e inserito il corrispondente layout a 9oz.

Modificata l'impostazione di default del parametro Fotocellula (Guasto non Bloccante).

Re-introdotta la funzione di impostazione delle polveri globali.

CHANGES.

SELECTION TABLE DOSES ASTRO IN-UK.

Written	PB	Approved	PM		
Eprom date	22/09/2005	Sw Code	Rev. 1.0 UK	Country	UK
D.A. Code	F960312-315	Model	IN8M/UKQ		

Implementation of slider and tank management.

Management of fan operation mounted in central position of FB shelf.

Changes for Operator Friendly (addes button, cleaning management and hot water)

Implementation of MDB, EVADTS, GSM and AUTOMATIC SETUP (Fill>6.x / Fill>7.x /
Tecn>5.6 / Tecn>6.x).

Programmable dripping times.

MDB menu for accepted below level bill setting.

Modification of database structure (upgrade needs the d.a. initialisation)

Modification of minimal value for hot and cold spouts movement times. (80).

Modification of movements caused by SPOUTS utility button (spouts outgoing and incoming
without stop)

Modified of statistical management by GSM.

D.A. programming by use of UP-KEY.

Modified washing and spurt management in d.a. with cold water.

Eliminated jug check during Jug Facilities operation.

Management of free-vend operation with only cashless systems and MDB protocol.

Inserted management for setup and statistics read/write using UPKEY.

Management of new Z3000 coffee unit.

Inserted the management of pregrinding function.

SW CPU - I/O BOARD REV. 1.0UK:

Modified 7oz selection doses and inserted corresponding 9oz selections layout.

Modified default photocell parameter value (Non Blocking Failure).

Re-inserted Global Powder setting menu.