

# NATIONAL'S REJECTOR CLEANING PROCEDURE



## 1. SOAK

Place entire rejector in boiling water and allow to soak for approximately 10 minutes.



## 2. SCRUB

Use stiff paintbrush or toothbrush and kitchen type cleanser to clean foreign matter from rejector.



## 3. RINSE

Rinse in boiling water.




## 4. DRY

Dry thoroughly by shaking or by applying filtered compressed air.

**SILICONE**

## 5. SILICONE

Remove all cradles, clean cradle bushings and pins with toothpick or match, apply National Rejectors' Silicone solution sparingly.

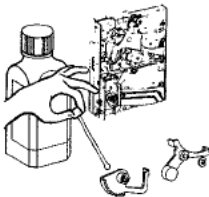

FOR SERVICE AND SALES, CONTACT THE FOLLOWING OFFICES:

NEW YORK 17, N. Y., 202 East 44th Street—Phone: MUrray Hill 2-3770  
ATLANTA 3, GEORGIA, 685 W. Peachtree, N. E. — Phone: TRinity 6-4318  
CHICAGO 39, ILLINOIS, 4907 W. Fullerton Ave.—Phone: NAational 2-3614

DALLAS 5, TEXAS, 4633 Insurance Lane — Phone: LAkeside 8-2291  
LOS ANGELES 6, CAL., 2309 West Pico Blvd. — Phone: DUmkirk 2-5772  
TORONTO, ONT., CAN: (10) 3513 Bathurst Street—Phone: RUssell 1-5629-0

**NATIONAL REJECTORS, INC. 5100 San Francisco Ave., St. Louis 15, Mo.**